

XonTel XT-16W firmware update guide


1. After connecting XonTel XT-16W phone to a wireless network (Wi-Fi), please make sure that XonTel XT-16W phone have internet connectivity.
2. Press the **Menu** soft key when the phone is idle.




3. Select **Advanced** and enter the password **123**.



4. From Advanced settings select **Update**.

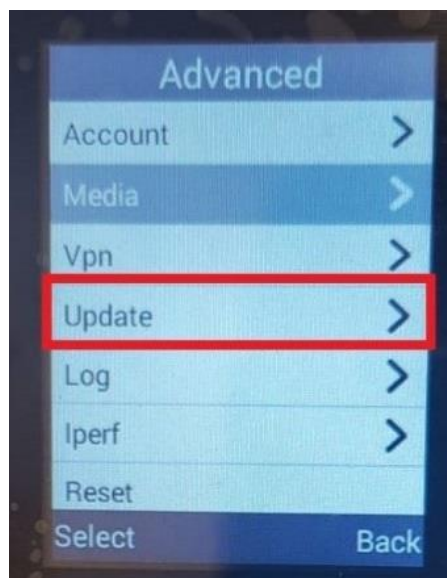

5. When a new firmware is available, press **Update** soft key and the phone will download the new firmware as shown in the figures below.

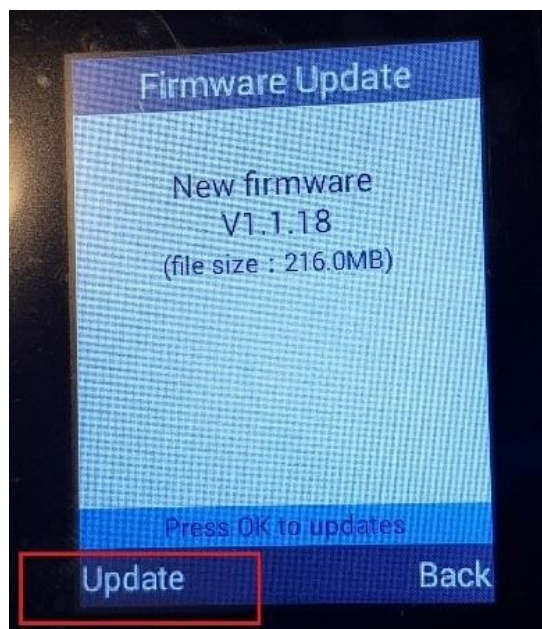



6. After the phone downloading the new firmware, click **Install** soft key to install the firmware. Please note that during the firmware installation, the phone will be restarted several times.

